


5 The indication LED will start blinking twice when the iRFID keypad starts the add routine.

The indication LED will blink 3 times when the iRFID keypad starts the remove routine.

6 When pressing the Home or Away button, you can present an RFID TAG or use the manual code buttons to issue an event to a controller.

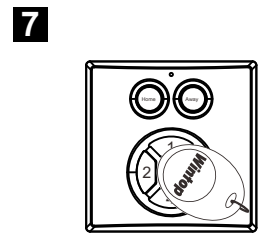

Wintop

iRFID Keypad G5

Art No.6131RA-500
908.4MHz
Made in China
www.wintop.com

