

# Plug-In Outdoor Smart Switch

BY  
JASCO®



Model 14284 / ZW4201

## KEY FEATURES

- One Z-Wave remote controlled AC outlet
  - o Remote ON/OFF control via the Z-Wave controller
  - o Manual ON/OFF control with the pushbutton
- Weather and impact resistant housing; Suitable for use outdoors in damp or wet conditions
- Includes outdoor mounting hardware
- Built-in Z-Wave range extender
- OTA Updateable
  - o Utilizes the Z-Wave Firmware Update Meta Data command class for standardized firmware updates Over the Air
- Integrated outlet cover keeps dirt & debris out when the module is not in use
- Z-Wave Plus Certified
- Black color

## SPECIFICATIONS

Power 120VAC, 60Hz

Signal (Frequency) 908.4/916 MHz

Maximum load for the Z-Wave controlled outlet: 600W (5A) Incandescent / 1/2 HP Motor or 1800W (15A) Resistive  
Z-Wave controlled outlet is fused @ 5A. This fuse is not user serviceable

Range: Up to 150 feet line of sight between the wireless controller and the closest Z-Wave receiver module

Operating Temperature: 32-104° F (0-40° C)

For Indoor Use Only

## REGULATORY CERTIFICATIONS



# Plug-In Outdoor Smart Switch

BY JASCO®



Model 14284 / ZW4201

## Z-WAVE MANUFACTURER SPECIFIC INFORMATION

<http://products.z-wavealliance.org/products/2526>

Z-Wave Certification Number: ZC10-17085721

Manufacturer ID: 0x0063

Product Type ID: 0x4F50

Product ID: 0x3032

## SUPPORTED COMMAND CLASSES

Supported Command Classes

- All Switch V1
- Association Group Information V1
- Association V2
- Basic V1
- Configuration V1
- CRC16 Encapsulation V1
- Device Reset Local V1
- Firmware Update MD V2
- Manufacturer Specific V2
- Powerlevel V1
- Scene Activation V1
- Scene Actuator Configuration V1
- Switch Binary V1
- Version V2
- Z-Wave Plus Info V2

Controlled Command Classes

- Basic V1

## MANUAL BUTTON PRESS FEATURES

Functions	Button Press Method
N/A	N/A

# Plug-In Outdoor Smart Switch

BY JASCO®



Model 14284 / ZW4201

## ADJUSTABLE CONFIGURATIONS

PARAMETER			
Number	Size	Name	Values
N/A	N/A	N/A	N/A

## FACTORY RESET

If plugged in, unplug from the receptacle. Press and hold the top button for at least 3 seconds while you plug the switch into the receptacle.