

SW-ESW01N Z-Wave Energy Switch Installation Guide

SW-ESW01N is a powered Z-Wave Plus electrical power measuring device, which is compatible with Z-Wave Plus enabled devices, regardless of the manufacturer and can also be used with other devices with the Z-Wave logo. If device is not part of Z-Wave network, with auto network add, the device will activate add process as soon as the device is powered on. The user can also manually activate add process by pressing the On/Off button. Once it is included into a Z-Wave network, SW-ESW01N can also act as a repeater in the network.


With a Z-Wave controller, user can also control the energy switch remotely. The energy switch has built-in over voltage, over current protection and OTA feature.

Specification


Frequency	908 MHz
Operating Temperature	Temperature: 0° - 40°C (32° - 104°F); Humidity: 0% - 80% RH (non-condensing)
Storage Temperature	Temperature: -20° - 70°C (-4° - 158°F); Humidity: 0% - 90% RH (non-condensing)
RF Communication Range	Open Air: 80M (Max.)
LED Indicator	LED x1
Power	120VAC
Operating Voltage	120V / 60Hz
Max Load	10A Resistive / 400W Incandescent
Over Voltage Protection(OVP)	132V (126V resume)
Over Current protection(OCP)	15.5A
Dimensions (H x W x D)	55mm x 55mm x 37.5mm
Compliance	FCC, UL ,Z-Wave plus

Package Contents

SW-ESW01N
Z-Wave Energy Switch

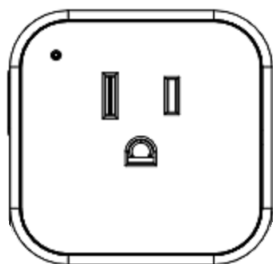

Installation & Operation Manual

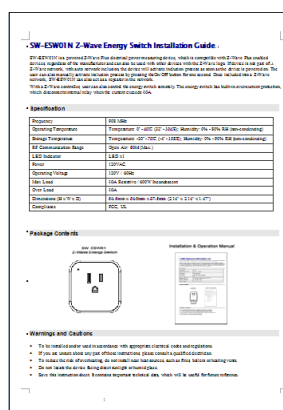


Warnings and Cautions

- To be installed and/or used in accordance with appropriate electrical codes and regulations.
- If you are unsure about any part of these instructions, please consult a qualified electrician.
- To reduce the risk of overheating, do not install near heat sources, such as fires, boilers or heating vents.
- Do not locate the device facing direct sunlight or humid place.

- Save this instruction sheet. It contains important technical data, which will be useful for future reference.

Operation

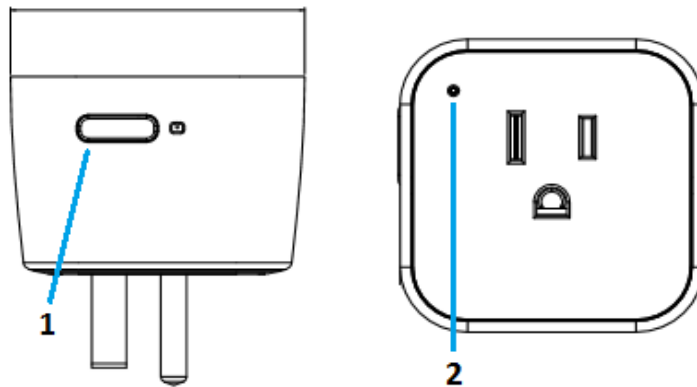

1. On/Off and Pairing Button

2. On/Off, Pairing and alarm LED (Green)

Installation

1. Put the SW-ESW01N into a wall receptacle. Make sure the receptacle is working properly. If it is controlled by a wall switch, make sure it is set to ON all the times.
2. Attach the appliance to the SW-ESW01N and make sure the load does not exceed 10A

Device Functions

The table below summarizes Z-Wave related functions supported by the energy switch.

Function	Description
Add(Inclusion)	<ol style="list-style-type: none"> 1. Put the Z-Wave controller into "Add (Inclusion)" mode. 2. Power on the device. 3. The LED is blinking while scanning the network and. This process may take up to 30 seconds. (In the meanwhile, our device will send its NIF.) 4. If the add process is successful, the LED will turn off and restore to relay state. If the process failed, press the On/Off button once and the device will be in auto add mode again.
Remove(Exclusion)	<ol style="list-style-type: none"> 1. Set the Z-Wave controller to "Remove (Exclusion)" mode. 2. Press the On/Off button three times within two seconds. 3. The LED will be blinking for one second. (In the meanwhile, our device will send its NIF.) <p>Note 1: if the Remove process is successful, the node ID will be cleared and the device will be in auto add mode.</p> <p>Note 2:Relay state default off</p>
Reset to Factory Defaults	<ol style="list-style-type: none"> 1. Press the On/Off button 4 times within two seconds and hold the 4th press until the LED lights up. 2. The LED will turn off after three seconds. The node ID will be cleared and all settings will be reset to factory defaults. 3. The device will be in auto add mode. <p>Note :Relay state default off</p>
Meter	<p>The device support below metering scale.</p> <ul style="list-style-type: none"> -0x00 Accumulate power consumption (kWh) -0x02 Power consumption (W) -0x04 AC load voltage (V) -0x05 AC load current (A) -0x06 Load power factor (PF)

*LED will be blinking quickly every 0.1sec, if OCP(Over Current Protection) or OVP(Over Voltage Protection) kick in. Otherwise, the blinking speed will be normal every 0.5sec.

Z-Wave Command Classes

COMMAND_CLASS_BASIC_V1
 COMMAND_CLASS_VERSION_V2
 COMMAND_CLASS_ZWAVEPLUS_INFO_V2
 COMMAND_CLASS_CONFIGURATION_V1
 COMMAND_CLASS_MANUFACTURER_SPECIFIC_V2
 COMMAND_CLASS_DEVICE_RESET_LOCALLY_V1
 COMMAND_CLASS_POWERLEVEL_V1
 COMMAND_CLASS_ASSOCIATION_V2
 COMMAND_CLASS_ASSOCIATION_GRP_INFO_V1
 COMMAND_CLASS_SWITCH_BINARY_V1
 COMMAND_CLASS_FIRMWARE_UPDATE_MD_V2
 COMMAND_CLASS_METER_V3
 COMMAND_CLASS_ALARM_V1

Association

Support grouping identifier = 1

Support one group with 1 nodes.

All triggering report will be sent to the associated nodes.

Devices From Multiple Vendors In One Network

SW-ESW01N can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

Z-Wave Configuration

Configuration Parameter	Function	Size (Byte)	Configuration Value	Default Setting	Description
1	Relay state when power up	1	0~2	0	0 : Last relay state 1 : Relay on 2 : Relay off
2	Auto report relay state	1	0~1	1	0 : Disable 1 : Enable

Command Class Report

Command Class	Report Type	Status	Description
Switch Binary	Relay State	Relay on: FF Relay off: 00	When relay state changes or device powers up.
Meter	OVP, OCP triggered	Scale: Depend on scale type. Value: Depend on metering result.	When OCP or OVP kick in, the device will send meter report and alarm report sequentially.
Alarm	OVP, OCP triggered	Alarm Type: 08 (Power Management) Alarm Level: FF (Open), 00 (Close)	

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC RF Radiation Exposure Statement:

- This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.